



What you will need:

1. PowerWise inGate
2. 12 - 30 VDC Power Supply
3. Ethernet Cable or Wifi Bridge (not included)
4. Laptop/Tablet/Phone

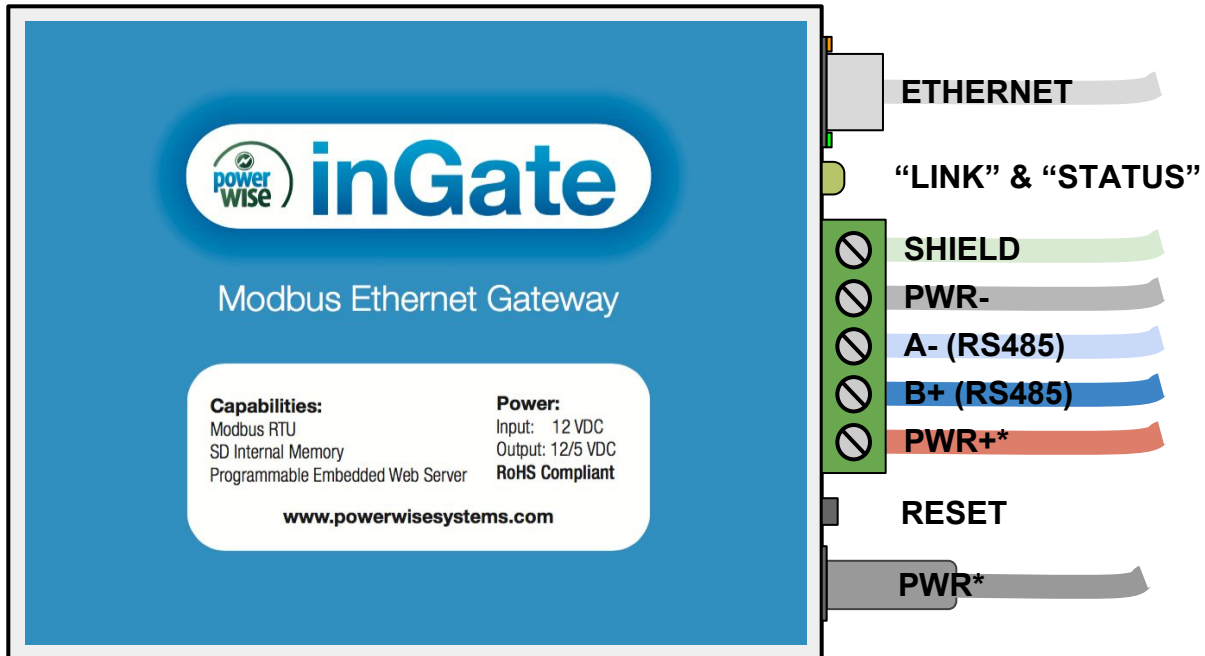

* DC power terminals are interconnected. Do not connect to multiple power sources.

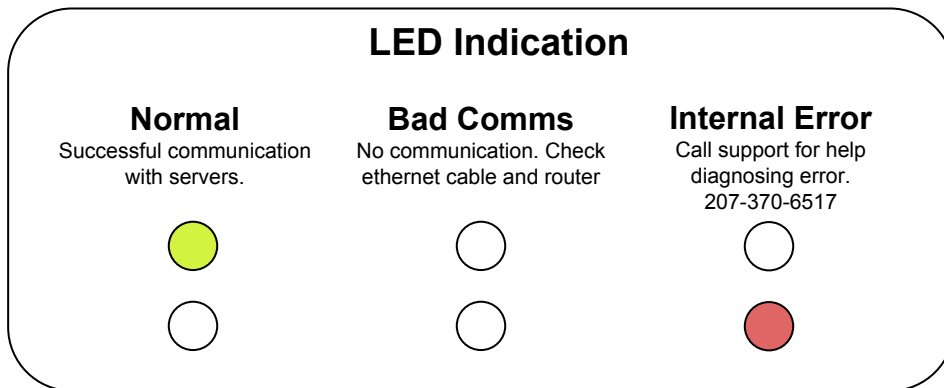

- Review RS-485 & Zigbee connection diagrams at www.powerwisesystems.com/support
- Setup new user and locations at the following address: app.intellergy.net