



inSense WT Quick Start

Wireless Relative Humidity & Temperature

Building Management Systems

+1-207-370-6517

sales@powerwisesystems.com


What's Included:

- Wireless Temperature (WT) Sensor
- 2x AA Lithium Batteries
-


Connecting the WT Sensor to an inGate:

1. Remove the cover from the case.
2. The sensor ships in hibernate mode. Press the button once to initiate the sensor to join the local inGate network.

NOTE: The wireless sensor will connect to the first network it finds. Make sure only one network is enabled.

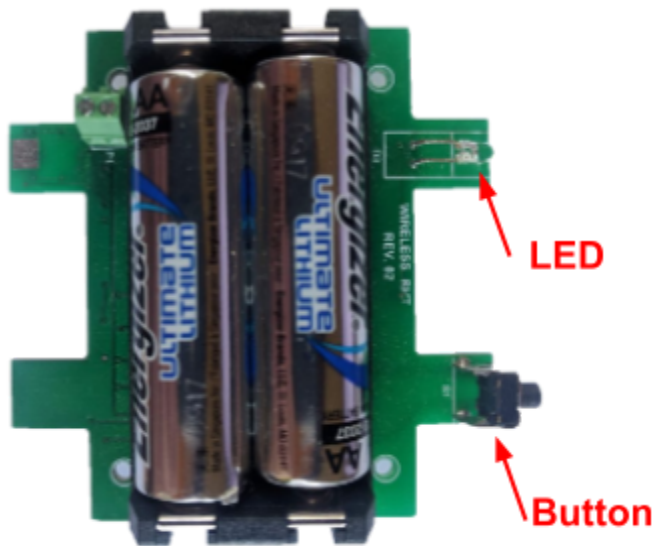

Wireless RH/T Waterproof

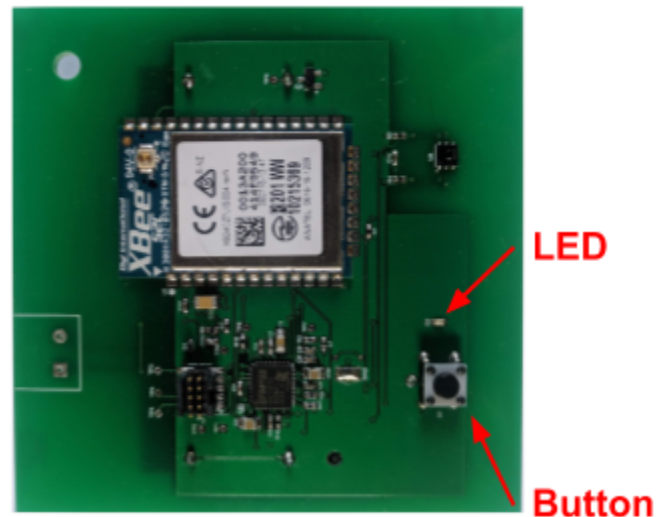

Wireless RH/T Wall Mount

LED Indication:

Continuous Flashing: Scanning network for matching inGate Zigbee Network.

No Flashing: Connected to inGate.

Button Press:

Single Press: Wakes up temperature sensor and sends all sensor values. If in hibernation will wake sensor to join an open network.

Three Presses: Within 5 second interval will hibernate the device and leave network. Two long LED flashes will indicate success.